



PUMPLOGIC

Setting the Time

First Use

PumpLogic requires an accurate clock for scheduling. On first use, the time **must be synced** before the pump schedule can operate.

Automatic Sync

When you load the PumpLogic webpage, your browser automatically sends the current date and time to the device.

To verify: Expand the **Network** card and check that **Last Sync** shows a recent timestamp.

If it shows "Not synced," simply reload the webpage.

Manual Time Entry

If automatic sync is not available (no phone or computer with the correct time), set the time manually:

1. Expand the **Network** card
2. Set the **Set Time** toggle to **Enabled**
3. Enter the current date and time
4. Press **Save Network Settings**

The time is saved to device memory and persists across reboots. When a browser syncs time later, Set Time is automatically disabled.

Once the clock is set, scheduling, event log timestamps, and all time-dependent features will operate correctly.